

GATE WHEEL MOUNTING INSTRUCTIONS

MOUNTING INSTRUCTIONS:

1. LOCATE GATE WHEEL ASSEMBLY ON GATE AS REQUIRED.
2. PRESS DOWN ON BRACKET ASSEMBLY TO COMPRESS THE SPRING A MINIMUM OF 1/4"
3. MAKING SURE THE SPRING IS COMPRESSED, MOUNT ASSEMBLY USING THE SUPPLIED MOUNTING SCREWS.
4. OPEN AND CLOSE GATE TO ENSURE GATE WHEEL OPERATES SMOOTHLY.

CHANGING MOUNTING ORIENTATION:

1. USING A HAMMER AND PUNCH, LIGHTLY TAP THE STEM PIN OUT OF THE WHEEL STEM.
- NOTE: TAKE CARE NOT TO DE-FORM THE STEM PIN DURING REMOVAL.**
2. SLIDE WHEEL STEM OUT OF THE BRACKET. IF POSSIBLE, HOLD SPRING AND WASHERS IN PLACE.
 3. ROTATE BRACKET 180 deg. AND RE-ASSEMBLE.
 4. RE-INSTALL STEM PIN AND MOUNT GATE WHEEL AS INSTRUCTED.

