



CORRECT

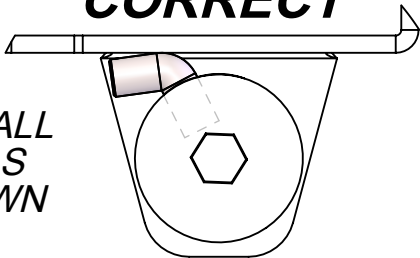


***INSTALL
PIN AS
SHOWN***

*FOR COMPLETE MOUNTING INSTRUCTIONS GO TO
www.nationwideindustries.com*

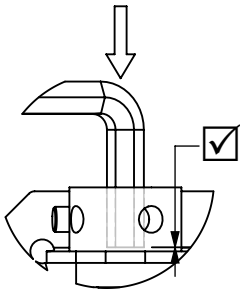

CORRECT

***THE WRENCH
MUST BE
INSERTED
ALL THE WAY
TO THE
BOTTOM OF
THE SOCKET
TO PREVENT
DAMAGE
DURING
ADJUSTMENT***

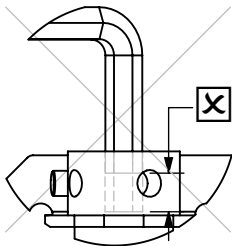

WRONG